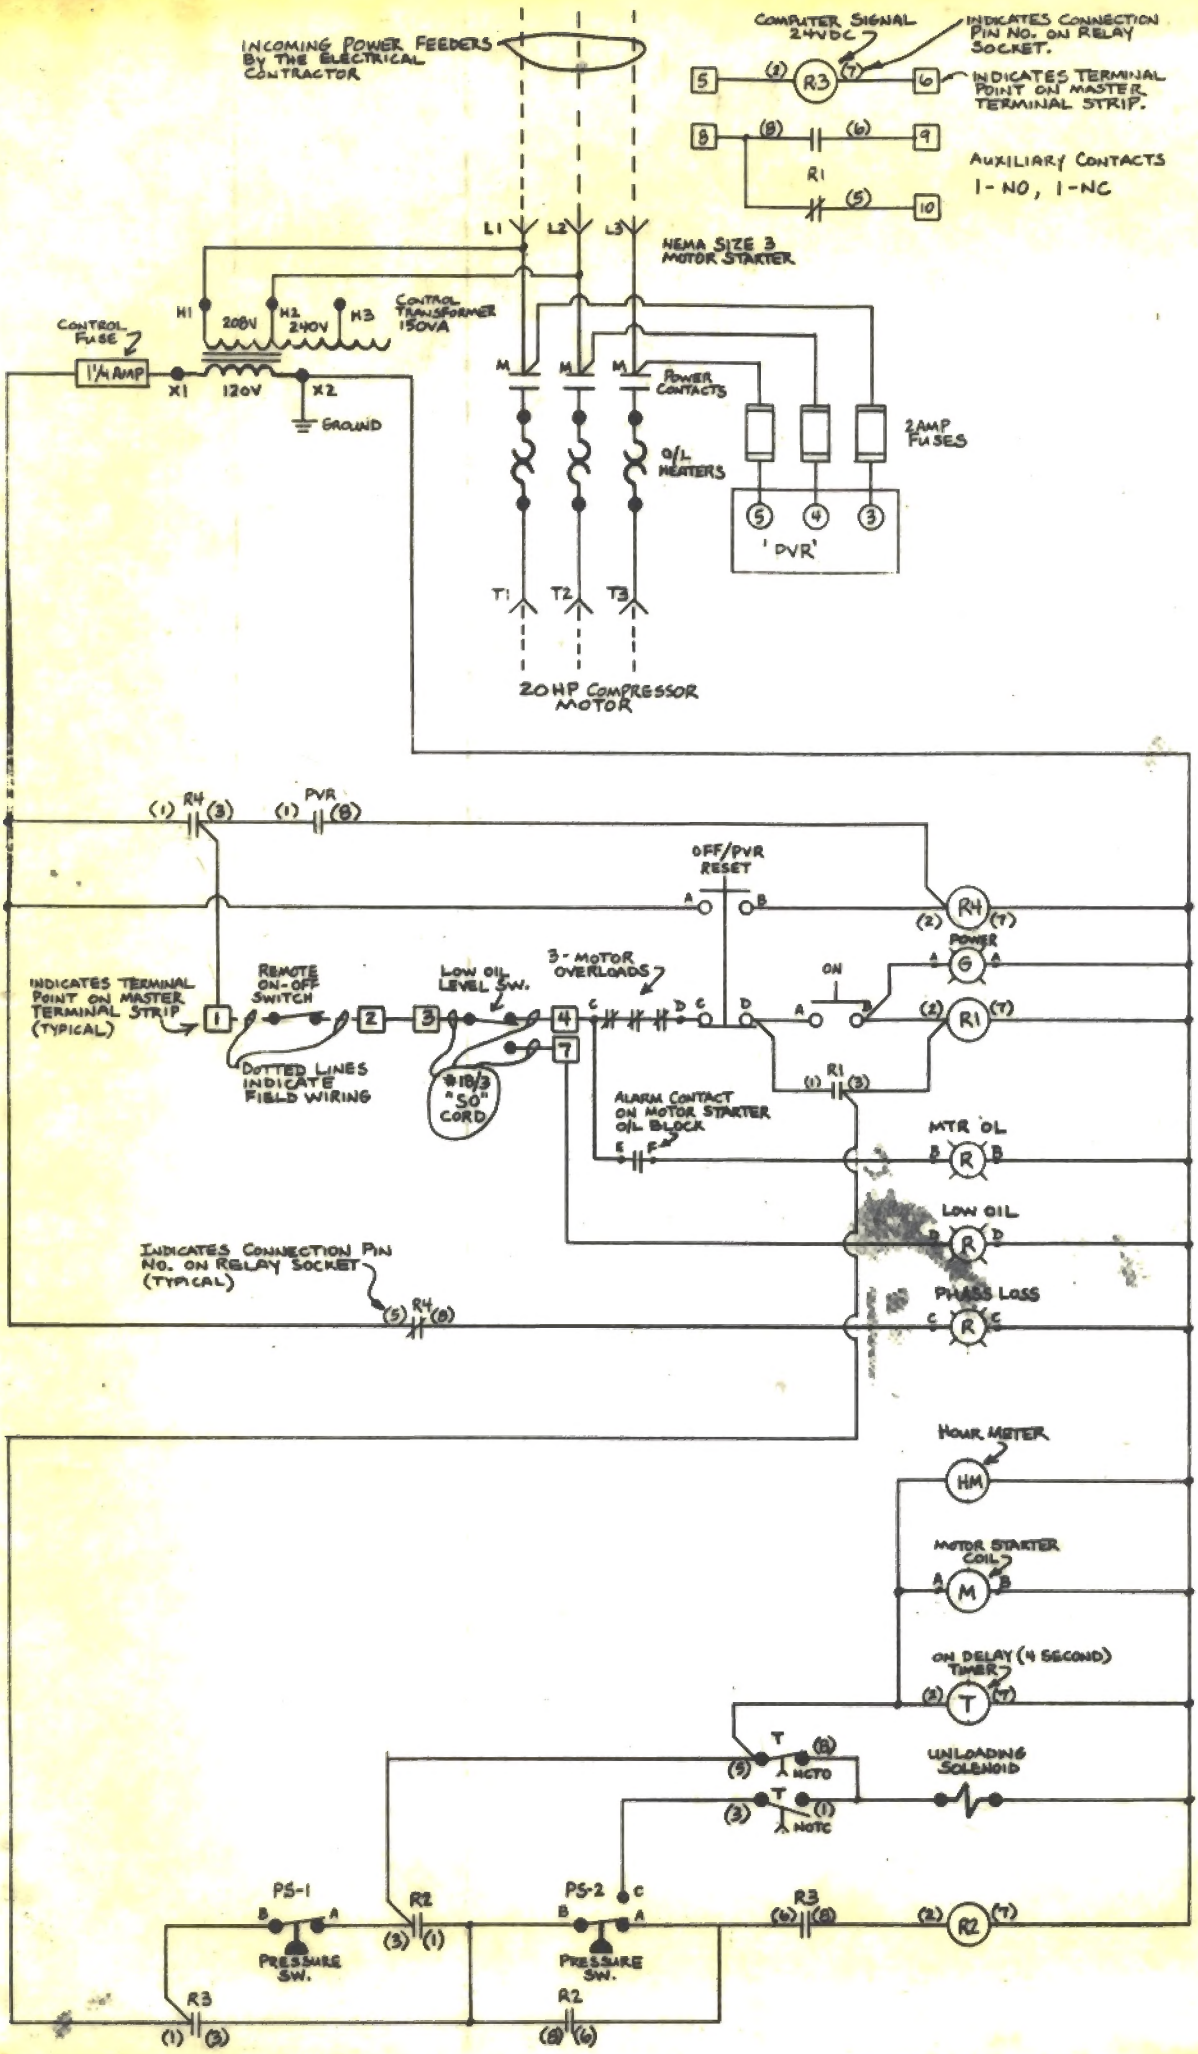
INCOMING POWER FEEDERS BY THE ELECTRICAL CONTRACTOR
COMPUTER SIGNAL 24VDC
INDICATES CONNECTION PIN NO. ON RELAY SOCKET.
INDICATES TERMINAL POINT ON MASTER TERMINAL STRIP.
AUXILIARY CONTACTS 1-NO, 1-NC
NEMA SIZE 3 MOTOR STARTER
CONTROL TRANSFORMER 150VA
208V
240V
480V
CONTROL FUSE
1¼ AMP
120V
GROUND
POWER CONTACTS
O/L HEATERS
2AMP FUSES
'PVR'
20HP COMPRESSOR MOTOR
OFF/PVR RESET
POWER
ON
INDICATES TERMINAL POINT ON MASTER TERMINAL STRIP (TYPICAL)
REMOTE ON-OFF SWITCH
LOW OIL LEVEL SW.
3-MOTOR OVERLOADS
DOTTED LINES INDICATE FIELD WIRING
#18/3 "SO" CORD
ALARM CONTACT ON MOTOR STARTER O/L BLOCK
MTR OL
LOW OIL
PHASE LOSS
INDICATES CONNECTION PIN NO. ON RELAY SOCKET (TYPICAL)
HOUR METER
MOTOR STARTER COIL
ON DELAY (4 SECOND) TIMER
UNLOADING SOLENOID
NCTO
NOTC
PS-1
PS-2
PRESSURE SW.
PRESSURE SW.